
Getting Started with AGUI Device


(AGUI Official website)

https://agui.xxx

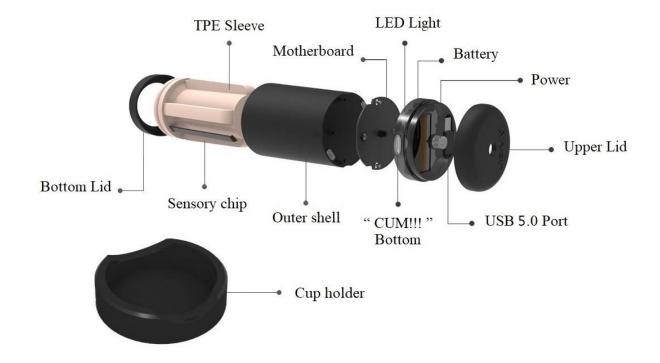

A-GUI Masturbation Cup can sync with the gaming software. Its shipped sensor can precisely detect penis penetration and the speed of thrusting. It can send the signal to the gaming software immediately.

Assemble

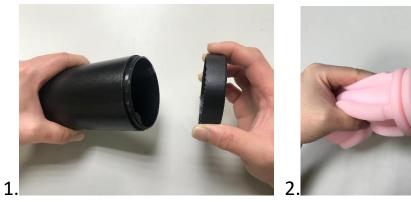











Operate

1. Install a 10440 lithium battery and plug the USB Bluetooth receiver in the cup into the computer

(You can ignore this step if your computer has Bluetooth)



2. Short press the power button on the top to turn on the AGUI Device.

(white light flashes every second to boot successfully)



3. Start AGUI World (driver) first



4. Install "windowsdesktop-runtime-6.0.25-win-x64.exe"



5. Device \rightarrow Refresh device \rightarrow Click device \rightarrow Connect

=			English ×
AGUI World	€ 刷新設備	2	36 FPS
命官網	Angel Wings V3		
局 設備	MAC 54:14:A7:ED:FC:44	3	
□ 系統	RSSI -43 未連線		
		每秒封包 : 0 加速度 X: 0.000 2	0.00000
		RSSI : 0 加速度 Y: 0.000 信號 : 0 加速度 Z: 0.000 1 電量 : 0 印經備後: 0.000	0.00000 0.00000 0.00000
		■2.2. · 0 · PCSAIR A 0.000 · · · · · · · · · · · · · · · · ·	
	藍牙 連線	倒邊按鍵 : 0 磁力計 X: 0.000 ⁻¹ 主板溫度 : 0 磁力計 Y: 0.000 遊戲連線數: 0 磁力計 Z: 0.000 ⁻²	0.00000
版本:2.00		遊戲連線数: 0 磁力計Z:0.000 ~ 0 0.5	

6. Adjust depth intensity (mouse drag)

AGUI World C 用 Angel W	11完下部分/精		
Angel W 6) 首纲	34V1 EX, TH4		45 FPS
	ings V3		
品 設備 MAC 54:14	:A7:ED:FC:44		\checkmark
▶ 系統 RSSI -49			
188≢ : 2.00	毎秒封包 : 25 RSSI : -36 信號 : 0 電量 : 54% 電壓 : 3.87V 電源按鍵 : 側递按鍵 : 主板温度 : 24 遊戲連線數 : 0	加速度 X: 0.578 2 加速度 Y: 0.731 加速度 Z: 0.419 1 陀螺儀 X: 0.002 陀螺儀 X: 0.000 陀螺儀 Z: 0.001 磁力計 X: -1.141 3 磁力計 Z: 1.484 3 0 10 10 10 10 10 10 10 10 10 10 10 10 10	0.00000 0.00000 0.00000 0.34204 0.7531 0.91528 0.4668 0.67456

7. The game default is acceleration control. If you want in-depth control, you can turn on the mapping.

=				Eng	lish ~	- 0 ×
AGUI World	設置		藍牙			
 合。 首綱 合。 設備 	語言 介面風格 縮小按鈕 開機啟動 自動更新 深度映射至加速度Z軸	繁體中文 白色 缩小至開始列 直接關閉	 最大廣播長度 支持中心角色 支持外圍角色 支持經典藍牙 經典藍牙安全 支持 BLE BLE 藍牙安全 支持廣播擴展 支持廣播攝範載 設定最大 PPS 速度 	于 5.4) 或 Intel AX210(恆牙 5.2) 或以上I		
版本:2.00						

8. Start the game and start playing!

Note:

AGUI World must be started before opening the game.

AGUI Store cannot be closed.

Please use lubricant when using the A-GUI masturbation cup.

Q&A

• Q: Can't connect after USB is plugged in?

• A: Please press the power button until the white light flashes every second before connecting again.

- Q: The power button is flashing red light every second.
- A: Please charge the battery when it is out of power. When the

battery is turned off, the red light briefly flashes for 0.1 second at fivesecond intervals to indicate charging, and the white light briefly flashes for 0.1 second at five-second intervals to indicate charging is complete.